


Replacing the Batteries

- 1 If you want to replace the batteries while the unit is running, connect it to the AC power.
- 2 Position the unit vertically so that its back panel is facing you, and you can see the battery compartment screws on its top.

Turn the battery compartment screws counterclockwise until the compartment door is loose. Since they are captive screws, you cannot remove them completely.

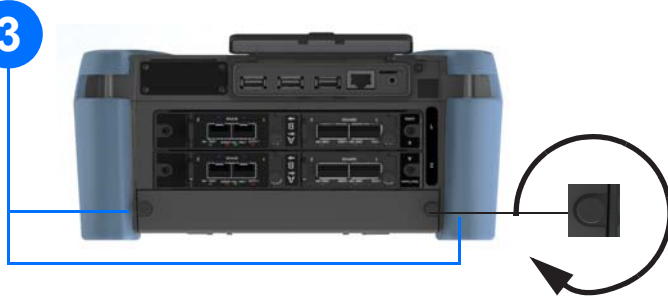


- 4 Remove the battery compartment door.



- 5 Use the markings on the back panel to locate the battery that you want to replace, and then pull on the battery's tab to free it from its socket.



- 6 Place the battery so that its poles are facing down and that they point towards the front of the unit (you should not be able to see the battery poles).

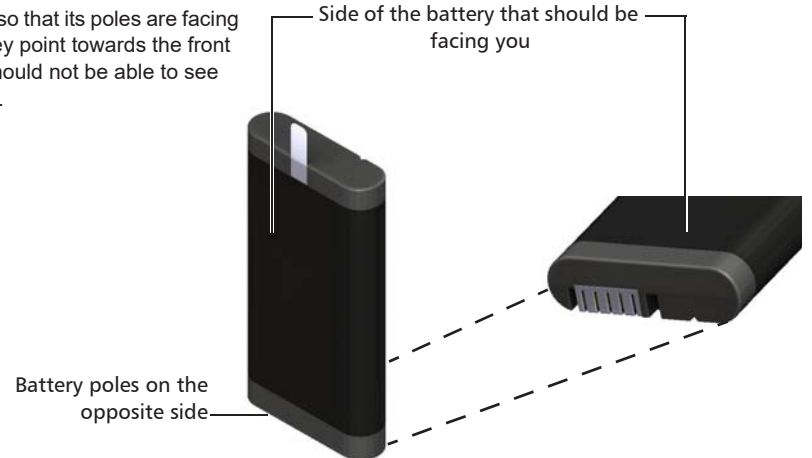

- 7 Slide in the new battery, and push it toward the bottom of the unit until it stops.



- 8 Place the battery compartment door on the unit so that it is flush with the top and back of the unit. If necessary, slightly move the battery compartment door until alignment is correct.




- 9 Turn the two retaining screws clockwise until they are tightened.



Quick Reference Guide

Accessing Connectors and Ports

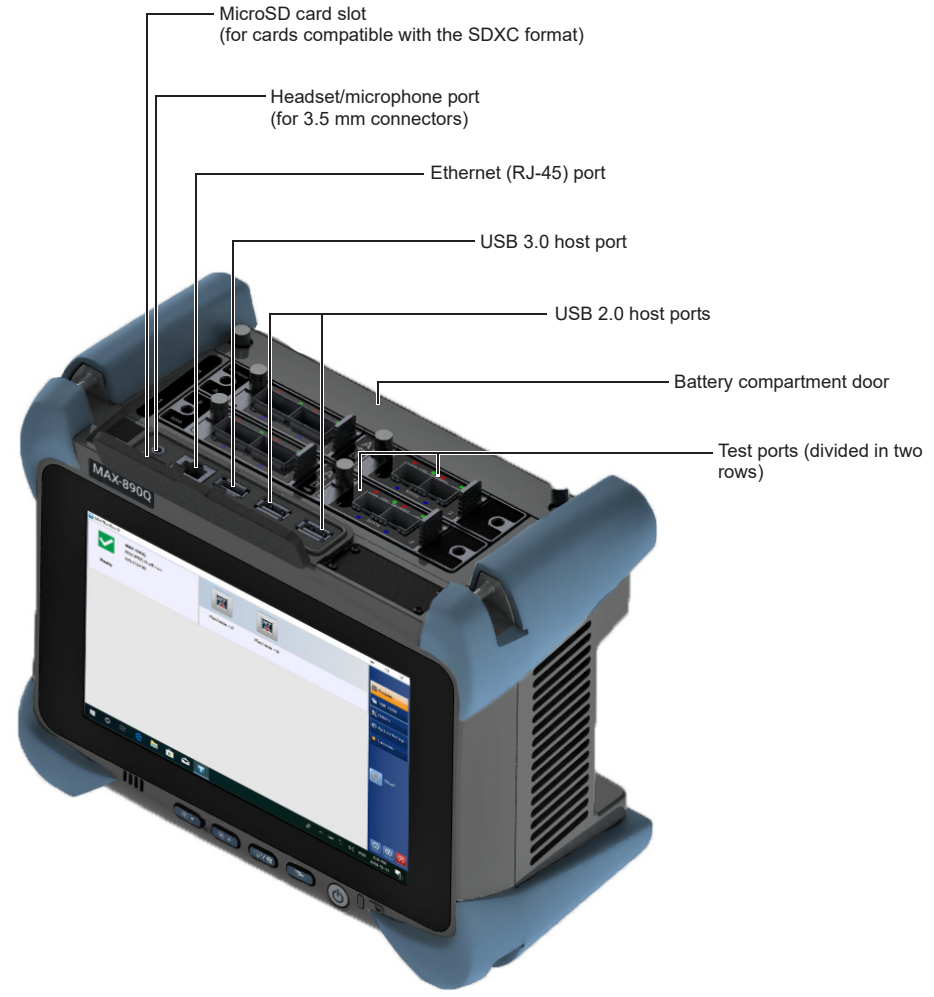

For more information, refer to the user guide.



Using Your Unit



Understanding Unit Statuses

- Ready
The unit is available for tests.
- In use
The unit is currently in use.
- Error
The unit cannot be used at this time because it had to protect itself from a critical problem.

Charging the Batteries

