

CD/PMD ANALYZER SOURCE

FLS-5834A

R&D AND MANUFACTURING

USER GUIDE



Copyright © 2003–2007 EXFO Electro-Optical Engineering Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, be it electronically, mechanically, or by any other means such as photocopying, recording or otherwise, without the prior written permission of EXFO Electro-Optical Engineering Inc. (EXFO).

Information provided by EXFO is believed to be accurate and reliable. However, no responsibility is assumed by EXFO for its use nor for any infringements of patents or other rights of third parties that may result from its use. No license is granted by implication or otherwise under any patent rights of EXFO.

EXFO's Commerce And Government Entities (CAGE) code under the North Atlantic Treaty Organization (NATO) is 0L8C3.

The information contained in this publication is subject to change without notice.

Trademarks

EXFO's trademarks have been identified as such. However, the presence or absence of such identification does not affect the legal status of any trademark.

Units of Measurement

Units of measurement in this publication conform to SI standards and practices.

Patents

EXFO's Universal Interface is protected by US patent 6,612,750.

Version number 2.0.0.

Contents

Certification Information	v
1 Introducing the FLS-5834A CD/PMD Analyzer Source	1
Front Panel	1
Back Panel	2
FLS-5834A Compatibility	2
Conventions	3
2 Safety Information	5
LED Safety Information	5
Electrical Safety Information	6
3 Getting Started with Your Light Source	9
Turning On and Off the CD/PMD Analyzer Source	9
FLS-5834A CD/PMD Analyzer Source Display	10
4 Setting CD/PMD Analyzer Source Parameters	11
Setting the Refresh Rate	12
Setting the Backlight	13
Setting the Contrast	13
Setting the Video Mode	14
Resetting the CD/PMD Analyzer Source	15
5 Operating the CD/PMD Analyzer Source	17
Cleaning and Connecting Optical Fibers	17
Installing the EXFO Universal Interface (EUI)	18
Activating or Deactivating the Source	19
6 Controlling the Source Remotely	21
Setting the Remote Command Mode	23
Setting the GPIB Address	24
Setting the Baud Rate	25
Setting the Flow Control	26
Communication Parameters	27
Standard Status Data Structure	28
Command Structure	33
Error Messages Format	34

Contents

- 7 Maintenance 35**
 - Cleaning EUI Connectors 36
 - Replacing Fuses 38
 - Recalibrating the Unit 39
 - Upgrading the Embedded Software 40
 - Recycling and Disposal (Applies to European Union Only) 42
- 8 Troubleshooting 43**
 - CD/PMD Analyzer Source Error Messages 43
 - GPIO Troubleshooting 47
 - Finding Information on the EXFO Web Site 48
 - Contacting the Technical Support Group 49
 - Transportation 50
- 9 Warranty 51**
 - General Information 51
 - Liability 52
 - Exclusions 52
 - Certification 52
 - Service and Repairs 53
 - EXFO Service Centers Worldwide 54
- A Technical Specifications 55**
- B Rackmount Installation 57**
- C Remote Control Commands 59**
 - IEEE 488.2 Commands—Quick Reference 59
 - IEEE 488.2 Commands—Description 60
 - Product-Specific Commands—Quick Reference 81
 - Product-Specific Commands-Description 82
- D SCPI-Based Errors 85**
- Index 87**

Certification Information

F.C.C. Information

Electronic test equipment is exempt from Part 15 compliance (FCC) in the United States. However, compliance verification tests are systematically performed on most EXFO equipment.

CE Information

Electronic test equipment is subject to the EMC Directive in the European Union. The EN61326 standard prescribes both emission and immunity requirements for laboratory, measurement, and control equipment. This unit has undergone extensive testing according to the European Union Directive and Standards.

CSA Information

This unit is certified by the CSA (certificate number 162451) and was evaluated according to applicable CSA and UL standards (as confirmed by “C-US” mark) as well as applicable IEC standards for use in Canada, the United States, and other countries.

Certification Information

EXFO **CE** **DECLARATION OF CONFORMITY**

Application of Council Directive(s):	73/23/EEC - The Low Voltage Directive 89/336/EEC - The EMC Directive
Manufacturer's Name:	EXFO ELECTRO-OPTICAL ENG.
Manufacturer's Address:	400 Godin Avenue Quebec, Quebec Canada G1M 2K2 (418) 683-0211
Equipment Type/Environment:	Light Industrial Scientific Equipment
Trade Name/Model No.:	FLS-5800 Modulated Broadband Light Source

Standard(s) to which Conformity is Declared:

EN 61010-1:2001	Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use, Part 1: General Requirements.
EN 60825-1:1994 / A2: 2001	Safety of laser products – Part 1: Equipment classifications, requirements, and user's guide
EN 61326:1997/ A3: 2003	Electrical Equipment for Measurement, Control and Laboratory Use - EMC Requirements
EN 55022: 1998/ A2: 2003	Limits and Methods of Measurement of Radio Disturbance Characteristics of Information Technology Equipment.

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive and Standards.

Manufacturer

Signature:




Full Name: Stephen Bull, E. Eng
Position: Vice-President Research and Development
Address: 400 Godin Avenue Quebec, Quebec, Canada
Date: February 25, 2002

1 Introducing the FLS-5834A CD/PMD Analyzer Source

The FLS-5834A CD/PMD Analyzer Source is a modulated, polarized broadband fiber-optic source that has been especially designed to be used with EXFO FTB-5800 Chromatic Dispersion Analyzer.


Front Panel

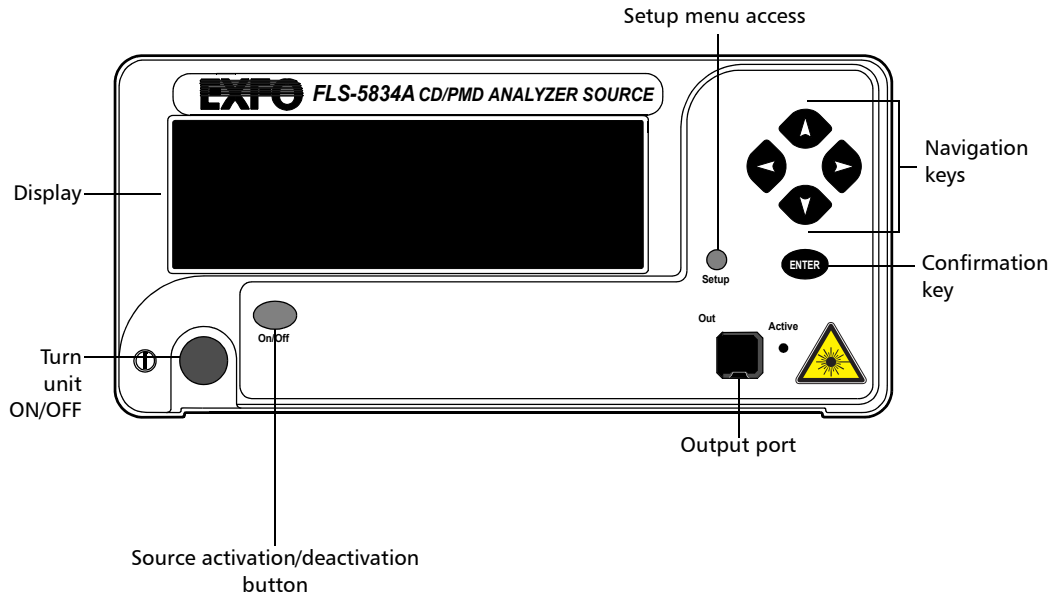

Introducing the FLS-5834A CD/PMD Analyzer Source

Back Panel

Back Panel

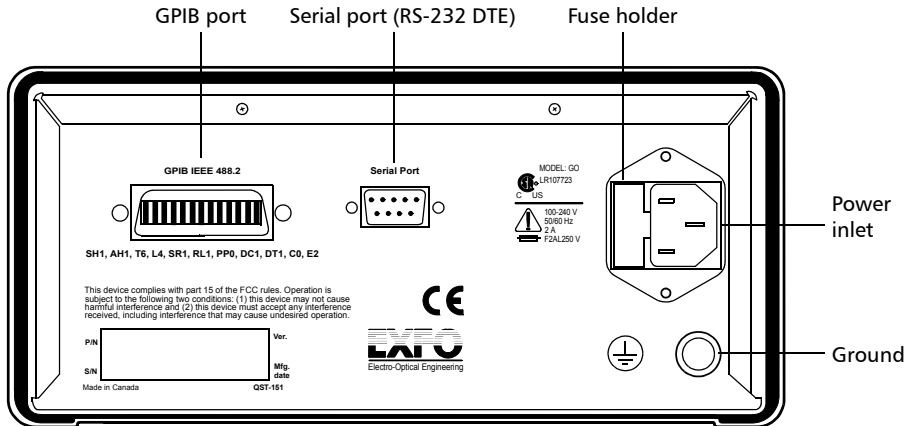

FLS-5834A Compatibility

The FLS-5834A is compatible with :

- FTB-5500B PMD Analyzer
- FTB-5800 Chromatic Dispersion Analyzer



IMPORTANT

Before using the FLS-5834A with the FTB-5800, you must install:

- ToolBox 6.28 or later.
- The appropriate product pack (if applicable)

If you are using ToolBox 6.28, ensure to install ToolBox FTB-5800 6.28.1.17 Product Pack.

Conventions

Before using the product described in this manual, you should understand the following conventions:



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in *death or serious injury*. Do not proceed unless you understand and meet the required conditions.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in *minor or moderate injury*. Do not proceed unless you understand and meet the required conditions.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in *component damage*. Do not proceed unless you understand and meet the required conditions.



IMPORTANT

Refers to information about this product you should not overlook.

2 **Safety Information**



WARNING

Do not install or terminate fibers while a light source is active. Never look directly into a live fiber and ensure that your eyes are protected at all times.



WARNING

Use of controls, adjustments and procedures for operation and maintenance other than those specified herein may result in hazardous radiation exposure.

LED Safety Information

Your instrument is a Class 1M LED product in compliance with standard IEC 60825-1 Amendment 2: 2001. Invisible LED radiation may be encountered at the output port.

The product is safe under reasonably foreseeable conditions of operation but it may be hazardous if you use optics within a diverging or collimated beam. *Do not view directly with optical instruments.*

- Wavelength: 1520 to 1640 nm
- Maximum output power at the connector: 10 mW

The unit has an active LED on its front panel. When lit, this LED indicates that an optical signal is being emitted from the source port.

The active LED will turn on three seconds before the source starts emitting.

Safety Information

Electrical Safety Information

Electrical Safety Information

This unit uses an international safety standard three-wire power cable. This cable serves as a ground when connected to an appropriate AC power outlet.

Note: *If you need to ensure that the unit is completely powered off, disconnect the power cable.*



WARNING

- Insert the power cable plug into a power outlet with a protective ground contact. Do not use an extension cord without a protective conductor.
- Before powering on the unit, connect all grounding terminals, extension cords and devices to a protective ground via a ground socket. Any interruption of the protective grounding is a potential shock hazard and may cause personal injury. Whenever the ground protection is impaired, do not use the unit and secure it against any accidental operation.
- Do not tamper with the protective ground terminal.

The color coding used in the electric cable depends on the cable. New plugs should meet the local safety requirements and include:

- adequate load-carrying capacity
- ground connection
- cable clamp



IMPORTANT

EXFO assumes no liability if you attempt to perform internal service on this unit.



WARNING

- Use this unit indoors only.
- Position the unit so that the air can circulate freely around it.
- Operation of any electrical instrument around flammable gases or fumes constitutes a major safety hazard.
- Do not remove unit covers during operation.
- To avoid electrical shock, do not operate the unit if any part of the outer surface (covers, panels, etc.) is damaged.
- Only authorized personnel should carry out adjustments, maintenance or repair of opened units under voltage. A person qualified in first aid must also be present. Do not replace any components while power cable are connected.
- Use only fuses with the required rated current and specified type (IEC, 5 mm x 20 mm (0.197 in x 0.787 in), fast-blow, 250 V, 2 A). Do not use repaired fuses or short-circuited fuse holders.
- Capacitors inside the unit may be charged even if the unit has been disconnected from its electrical supply.


Safety Information

Electrical Safety Information

Equipment Ratings	
Temperature	
► Operation	0 °C to 40 °C (32 °F to 104 °F)
► Storage	-40 °C to 70 °C (-40 °F to 158 °F)
Relative humidity ^a	0 % to 80 % non-condensing
Maximum operation altitude	2000 m (6562 ft)
Pollution degree	2
Installation category	II
Power supply rating ^b	100 V to 240 V (50 Hz/60 Hz) maximum input power 2 A

- a. Measured in 0 °C to 31 °C (32 °F to 87.8 °F) range, decreasing linearly to 50 % at 40 °C (104 °F).
b. Not exceeding $\pm 10\%$ of the nominal voltage.

The following label is located on the back panel of the unit:

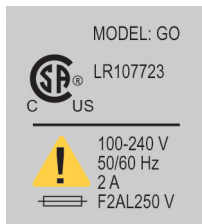

3 **Getting Started with Your Light Source**

Turning On and Off the CD/PMD Analyzer Source



WARNING

Before turning on the source, please read the *Electrical Safety Information* on page 6.

To turn on and off the CD/PMD Analyzer Source :

Press the red button located in the lower left-hand corner of the front panel.

Upon startup, the unit beeps twice, performs a self-test and then displays the main window with the source deactivated.


When the unit is turned off, the current Setup menu settings remain in a storage device called non-volatile memory. These settings include display features and remote control.

Getting Started with Your Light Source

FLS-5834A CD/PMD Analyzer Source Display

FLS-5834A CD/PMD Analyzer Source Display

Form the main window of your unit, you can get important information on the source with just one glance.

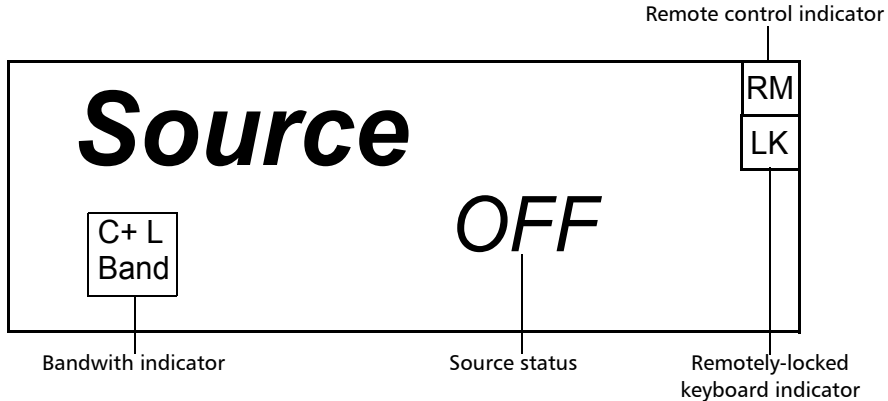

- The *source status* indicator shows whether the source is active or not (ON/OFF). In the case of an active source, a graphical element representing a light beam is also displayed.
- The *remote control* indicator (**RM**) appears when the unit is currently controlled by remote commands (via GPIB or RS-232 communication mode).
- The *locked keyboard* indicator (**LK**) shows that a remote application prevents you from using the keyboard of the unit.

Note: The term “keyboard“ refers to all front panel buttons –except the red button used to power the unit on or off.

4 Setting CD/PMD Analyzer Source Parameters

The blue button on the right side of the display provides access to the single-level Setup menu. You can access the Setup menu even while the source is active. The figure below shows Setup menu items.

Refresh Rate	8 Hz	RS232 / GPIB	GPIB
Backlight	ON	GPIB Addr.	12
Contrast	▼ ● ▲	Baud Rate	N.A.
Video Mode	STD	Flow Ctrl	N.A.
Exit			

To set a parameter:

1. Use arrows on the front panel of the unit to select the parameter you want to modify. The current selection is displayed in reverse video.
2. Press ENTER to edit the parameter. The cell containing the value will turn to reverse video, indicating you can modify its contents.
3. Use the up/down arrows to select the appropriate value.
4. Confirm your selection by pressing ENTER. The display will return to normal.

To exit the Setup menu, press the blue key providing access to the menu. You can also select the **Exit** item from the Setup menu (last item at the bottom of the window) and press ENTER. The CD/PMD Analyzer Source will revert to its state prior to entering the menu.

Note: *The unit will beep whenever it does not allow an operation.*

Setting CD/PMD Analyzer Source Parameters

Setting the Refresh Rate

Setting the Refresh Rate

You can define the refresh rate of the display.

To set the refresh rate:

1. Press the Setup key.
2. Use the up/down or left/right arrow keys to select **Refresh Rate** (the item will be displayed in reverse video).

Refresh Rate	8 Hz	RS232 / GPIB	GPIB
Backlight	ON	GPIB Addr.	12
Contrast	▼ ● ▲	Baud Rate	N.A.
Video Mode	STD	Flow Ctrl	N.A.
Exit			

3. Press ENTER to access the **Refresh Rate** edit box.
4. Use the up/down arrow keys to set the refresh rate between 1/2 Hz, 1 Hz, 2 Hz, 4 Hz, 8 Hz and 16 Hz.
5. Press ENTER to confirm the new refresh rate.

Setting the Backlight

In certain circumstances, you might want to deactivate the display backlight.

To deactivate the backlight:

1. Press the Setup key.
2. Use the up/down or left/right arrow keys to select **Backlight** (the item will be displayed in reverse video).
3. Press ENTER to access the **Backlight** edit box.
4. Use the up/down arrow keys until the backlight value changes to **OFF**.
5. Press ENTER to confirm the new backlight setting.

To reactivate the backlight:

- Standing very close to the screen to see the information displayed, repeat steps 1 to 4 above (but set the backlight value to ON).
- OR
- Reset the unit to the default factory parameters (see *You may want to reset the CD/PMD Analyzer Source parameters to their original values.* on page 15).

Setting the Contrast

To modify the contrast:

1. Press the Setup key.
2. Use the up/down or left/right arrow keys to select **Contrast** (item will appear in reverse video).
3. Press ENTER to access the **Contrast** edit box.
4. Use the up/down arrow keys to adjust the contrast as required.
5. Press ENTER to confirm the contrast adjustment.

Setting CD/PMD Analyzer Source Parameters

Setting the Video Mode

Setting the Video Mode

To change the video mode:

1. Press the Setup key.
2. Use the up/down or left/right arrow keys to select **Video Mode** (item will appear in reverse video).
3. Press ENTER to access the **Video Mode** edit box.
4. Use the up/down arrow keys to set the required video mode.

Refresh Rate	8 Hz	RS232 / GPIB	GPIB
Backlight	ON	GPIB Addr.	12
Contrast	▼ ● ▲	Baud Rate	N.A.
Video Mode	STD	Flow Ctrl	N.A.
Exit			

Refresh Rate	8 Hz	RS232 / GPIB	GPIB
Backlight	ON	GPIB Addr.	12
Contrast	▼ ● ▲	Baud Rate	N.A.
Video Mode	INV	Flow Ctrl	N.A.
Exit			

5. Press ENTER to confirm the video mode.

Resetting the CD/PMD Analyzer Source

You may want to reset the CD/PMD Analyzer Source parameters to their original values.

To reset parameters to values at time of purchase, while turning on the unit:

Press ENTER until the unit beeps three times.

All the user-defined parameters are automatically reset. The following table presents the parameters and their default values.

Parameters	Reset Value or State
Source	OFF
Backlight	ON
Video mode	STD (standard)
Refresh rate	4 Hz
RS232/GPIB (remote control) ^a	GPIB
GPIB address ^a	12
Baud rate ^a	N.A.
Flow ctrl ^a	N.A.

a. Parameter cannot be reset by a remote control command.

5 Operating the CD/PMD Analyzer Source

Cleaning and Connecting Optical Fibers



IMPORTANT

To ensure maximum power and to avoid erroneous readings:

- Always clean fiber ends as explained below before inserting them into the port. EXFO is not responsible for damage or errors caused by bad fiber cleaning or handling.
- Ensure that your patchcord has appropriate connectors. Joining mismatched connectors will damage the ferrules.

To connect the fiber-optic cable to the port:

1. Clean the fiber ends as follows:
 - 1a. Gently wipe the fiber end with a lint-free swab dipped in isopropyl alcohol.
 - 1b. Use compressed air to dry completely.
 - 1c. Visually inspect the fiber end to ensure its cleanliness.
2. Carefully align the connector and port to prevent the fiber end from touching the outside of the port or rubbing against other surfaces.

If your connector features a key, ensure that it is fully fitted into the port's corresponding notch.
3. Push the connector in so that the fiber-optic cable is firmly in place, thus ensuring adequate contact.

If your connector features a screwsleeve, tighten the connector enough to firmly maintain the fiber in place. Do not overtighten, as this will damage the fiber and the port.

Note: *If your fiber-optic cable is not properly aligned and/or connected, you will notice heavy loss and reflection.*


Operating the CD/PMD Analyzer Source

Installing the EXFO Universal Interface (EUI)


Installing the EXFO Universal Interface (EUI)

The EUI fixed baseplate is available for connectors with angled (APC) or non-angled (UPC) polishing. A green border around the baseplate indicates that it is for APC-type connectors.

Green border
indicates APC
option




Bare metal
(or blue border)
indicates UPC
option



To install an EUI connector adapter onto the EUI baseplate:

1. Hold the EUI connector adapter so the dust cap opens downwards.

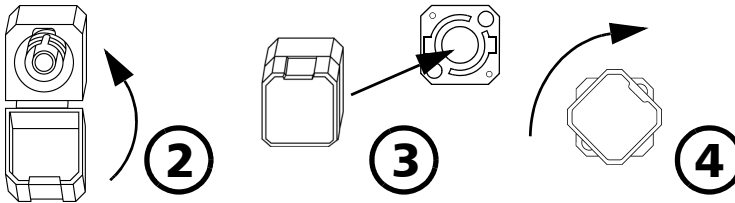


2. Close the dust cap in order to hold the connector adapter more firmly.
3. Insert the connector adapter into the baseplate.
4. While pushing firmly, turn the connector adapter clockwise on the baseplate to lock it in place.

Activating or Deactivating the Source

To activate the source:

1. Setup the source as explained in *Setting CD/PMD Analyzer Source Parameters* on page 11.
2. To activate the source, press on the **On/Off** button. The active LED on the module front will light up, and the front display will read "Source ON", also showing a light beam icon.

The word "ON" will flash during the three-second safety delay.

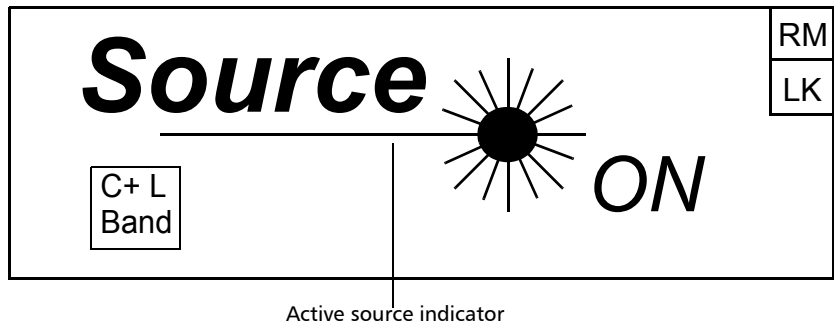

To deactivate the source:

To deactivate the source, press the **On/Off** button again. The active LED on the module front will then turn off and the display will read "Source OFF."




IMPORTANT

To obtain optimum stability, let the source warm up for 10 minutes. If you do not respect this warmup time, the CD measurement will present an uncertainty of 0.15 ps/nm.

6 Controlling the Source Remotely


You can control the CD/PMD Analyzer Source remotely either by:

- a GPIB interface (through a GPIB cable connected to the GPIB port)
- or
- an RS-232 interface (through a serial cable connected to the serial port).

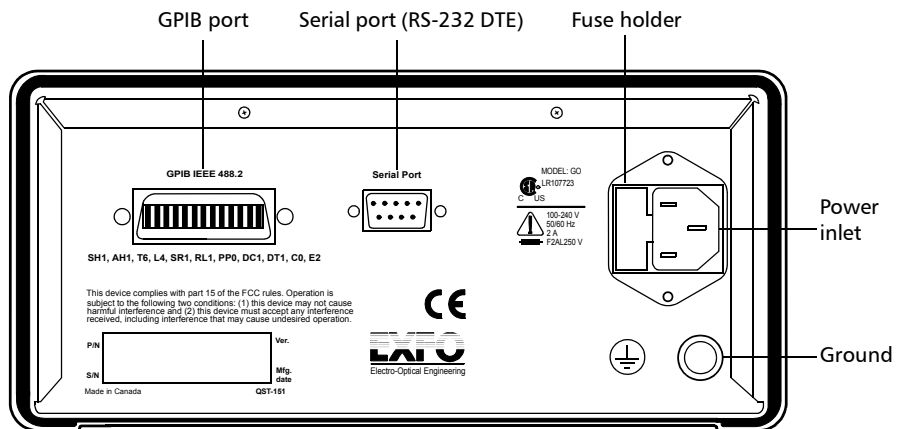

Controlling the Source Remotely

The RS-232 connector (serial port) at the back of the CD/PMD Analyzer Source uses a DTE pinout configuration.

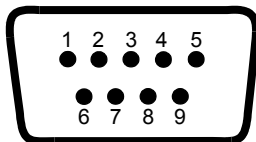

Pin Number	Description	Direction
2	Receive (Rx)	Input
3	Transmit (Tx)	Output
5	Signal ground (Gnd)	—

The commands used in both protocols are the same and are summarized in two reference tables:

- Common GPIB commands are listed in *IEEE 488.2 Commands—Quick Reference* table on page 59.
- Specific commands for the CD/PMD Analyzer Source are shown in the *Product-Specific Commands—Quick Reference* table on page 81.

You can find detailed information in the Remote Control Commands appendix.

When the CD/PMD Analyzer Source is remotely controlled, **RM** appears in the upper right-hand corner of the display.

Setting the Remote Command Mode

To remotely control the CD/PMD Analyzer Source, you must set a GPIB address or activate the RS-232 port.

To set a remote command mode:

1. Press the Setup key.
2. Use the up/down or left/right arrow keys to select **RS232 / GPIB**. The current setting is displayed.

Note: If GPIB is currently selected and you want to specify a GPIB address, see *Setting the GPIB Address* on page 24.

Refresh Rate	8 Hz	RS232 / GPIB	GPIB
Backlight	ON	GPIB Addr.	12
Contrast	▼ ● ▲	Baud Rate	N.A.
Video Mode	STD	Flow Ctrl	N.A.
Exit			

3. Press ENTER to access the **RS232 / GPIB** edit box.
4. Use the up/down arrow keys to toggle between **GPIB** and **RS232**.
5. Press ENTER to confirm.

If you selected **RS232**, the **GPIB Addr.** menu option is deactivated (**N.A.** is displayed).

If you selected *GPIB*, the **Baud Rate** and **Flow Ctrl** menu options are disabled (**N.A.** is displayed). If necessary, you can change the GPIB address.

Controlling the Source Remotely

Setting the GPIB Address

Setting the GPIB Address

If GPIB is selected as the remote command mode, you can select the GPIB address you want to use from 1 to 30 (default value is 12).

To set a GPIB address:

1. Press the Setup key.
2. Use the up/down or left/right arrow keys to select **GPIB Addr.** The current GPIB address is displayed.

Note: *If you are in RS-232 mode, the GPIB address cell will display N.A. You must change the communication mode to **GPIB** before setting an address.*

Refresh Rate	8 Hz	RS232 / GPIB	GPIB
Backlight	ON	GPIB Addr.	12
Contrast	▼ ● ▲	Baud Rate	N.A.
Video Mode	STD	Flow Ctrl	N.A.
Exit			

3. Press ENTER, then use the up/down arrow keys to select a GPIB address between 1 and 30.
4. Press ENTER to confirm your choice.

Setting the Baud Rate

The baud rate is a parameter related to RS-232 communication. It determines the speed at which data is sent between the unit and a computer, in bits per second (bps).

To change the baud rate for your remote communications:

1. Press the Setup key.
2. Use the up/down or left/right arrow keys to select **Baud Rate**. The current setting is displayed.

Refresh Rate	8 Hz	RS232 / GPIB	RS232
Backlight	ON	GPIB Addr.	N.A.
Contrast	▼ ● ▲	Baud Rate	19200
Video Mode	STD	Flow Ctrl	Soft
Exit			

3. Press ENTER, then use the up/down arrow keys to select the baud rate. You can select 1200, 2400, 4800, 9600 or 19200 bps.
4. Press ENTER to confirm.

Setting the Flow Control

The flow control parameter applies only to RS-232 communication. This parameter determines the type of serial communication used.

Choose **Soft** if you want the speed of data transmission to match the speed at which the device can process it. This enables the computer and the CD/PMD Analyzer Source to stop each other from transmitting by sending a control character (Xoff). They will also be able to restart the transmission by sending another control character (Xon). This is known as a software handshake, a procedure requiring a special cable.

To set a flow control:

1. Press the Setup key.
2. Use the up/down or left/right arrow keys to select **Flow Ctrl**. The current setting is displayed.

Refresh Rate	8 Hz	RS232 / GPIB	RS232
Backlight	ON	GPIB Addr.	N.A.
Contrast	▼ ● ▲	Baud Rate	19200
Video Mode	STD	Flow Ctrl	Soft
Exit			

3. Press ENTER, then use the up/down arrow keys to select the type of flow you want. None means no flow control. Soft allows the unit or computer controlling it, to turn the data transmission on or off.
4. Press ENTER to confirm.

Communication Parameters

The communication parameters are used to set the communication port.

Note: *EOS* means “End of String.” *EOI* means “End or Identify.”

For GPIB Communication	
Terminate Read on EOS	Yes
Set EOI with EOS on Writes	Yes
Type of compare on EOS	8 bits
EOS byte	0Ah
Send EOI at end of Writes	Yes
GPIB primary address	See <i>Setting the GPIB Address</i> on page 24
GPIB secondary address	None

For RS-232 Communication	
EOS bytes	0Ah
Baud rate	1200/2400/4800/9600/ 19200 bps
Parity	None
Data bits	8 bits
Stop bits	1 bit
Flow control	Software (Xon/Xoff) or None
Activation	See <i>Setting the Remote Command Mode</i> on page 23

Standard Status Data Structure

The four tables below give information on the common status and enable registers as defined by IEEE 488.2.

The diagram displayed on page 31 is a useful aid in understanding the general commands and how a service request (SRQ) is generated.

- Standard event status register (ESR)

Bits	Mnemonics	Bit Value
7	Power on	128
6	Not used	0
5	Command error	32
4	Execution error	16
3	Device dependent error	8
2	Query error	4
1	Not used	0
0	Operation complete	1

➤ Standard event status enable register (ESE)

Bits	Mnemonics	Bit Value
7	Power on	128
6	Not used	0
5	Command error	32
4	Execution error	16
3	Device dependent error	8
2	Query error	4
1	Not used	0
0	Operation complete	1

Controlling the Source Remotely

Standard Status Data Structure

➤ Status byte register (STB)


Bits	Mnemonics	Bit Value
7	Not used	0
6	Request service / Master summary status	64
5	Event summary bit	32
4	Message available	16
3	Not used	0
2	Error / Event queue	4
1	Not used	0
0	Not used	0

➤ Service request enable register (SRE)

Bits	Mnemonics	Bit Value
7	Not used	0
6	Reserved	0
5	Event status byte	32
4	Message available	16
3	Not used	0
2	Error / Event queue	4
1	Not used	0
0	Not used	0

Controlling the Source Remotely

Standard Status Data Structure

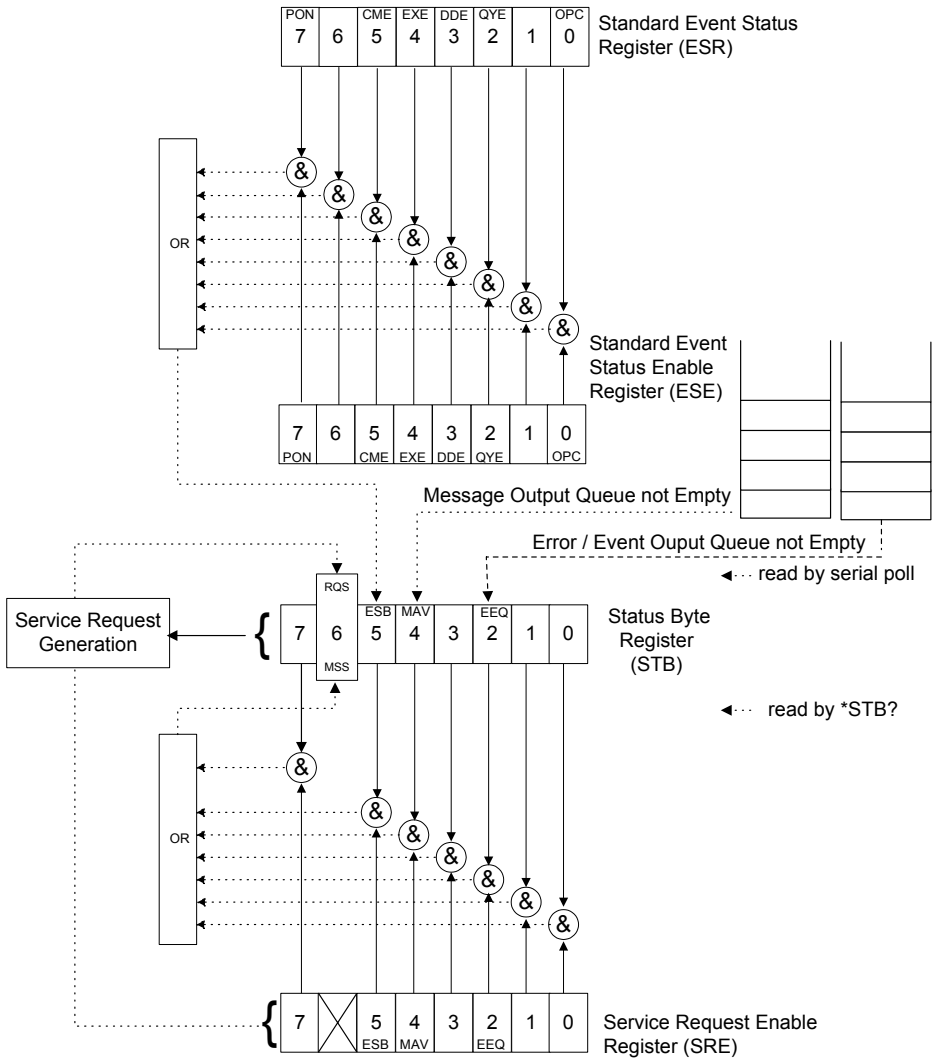

Controlling the Source Remotely

Standard Status Data Structure

An SRQ is forced when a bit in the status byte register goes from 0 to 1 and the corresponding SRE mask bit is set. If an SRQ is forced, the RQS bit is set to 1 and will remain there until read by a serial poll –even if the reason or condition causing the service request no longer exists. Similarly, if a serial poll reads the RQS, it is reset to 0, whether or not the condition causing the service request still exists.

Command Structure

The GPIB and RS-232 commands follow the guidelines determined by the Standard Commands for Programmable Instruments (SCPI) consortium. For example, the following command syntax is used to activate or deactivate the source.

SOUR:POW[:STAT] <wsp> <Boolean>

- SOUR, POW and STAT are keywords that define the function of the command.
- [] indicates that a keyword or parameter is optional.
- <wsp> indicates that a space is required ("wsp" stands for "white space").
- <Boolean> indicates the command parameter.
- Keywords must be separated by a colon.

To enter commands or queries you must use either the full word for the command, or the three- or four-letter shortcut. Commands are not case-sensitive, however spelling errors will cancel the command or query.

The command or query can be written using only shortcuts, only full words, or a combination of both.


Other command syntax elements are:

- The comma, which is used to separate values in a command or query.
- The semi-colon, which is used to separate commands or queries, when you send more than one at a time

Note: *It is recommended that you retrieve the response immediately after each query.*

Error Messages Format

System and device specific errors are managed by the FLS-5834A CD/PMD Analyzer Source. The generic format for error messages is illustrated in the following figure.

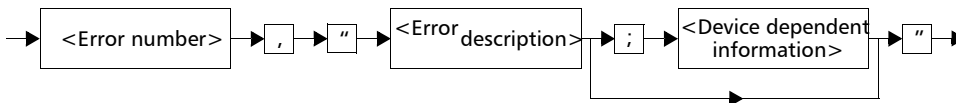

As shown in the above figure, the message contains three parts:

- Error number
- Error description
- Device dependent information

All error messages are stacked in a FIFO buffer. When there is at least one message in the buffer, bit 2 of the status byte register is set to 1. Use the SYST:ERR? command to read the most recent message. The error message buffer is initialized when starting the CD/PMD Analyzer Source, when executing the *CLS command, or by reading the last message stored in the buffer.

Note: Error messages ending in a negative number are SCPI-based errors.

7 **Maintenance**

To help ensure long, trouble-free operation:

- Always clean fiber-optic connectors before using them.
- Keep the unit free of dust.
- Clean the unit casing and front panel with a cloth slightly dampened with water.
- Store unit at room temperature in a clean and dry area. Keep the unit out of direct sunlight.
- Avoid high humidity or significant temperature fluctuations.
- Avoid unnecessary shocks and vibrations.
- If any liquids are spilled on or into the unit, turn off the power immediately and let the unit dry completely.



WARNING

Use of controls, adjustments, and procedures for operation and maintenance other than those specified herein may result in hazardous radiation exposure.

Cleaning EUI Connectors

Regular cleaning of EUI connectors will help maintain optimum performance. There is no need to disassemble the unit.




IMPORTANT


If any damage occurs to internal connectors, the module casing will have to be opened and a new calibration will be required.

To clean EUI connectors:

1. Remove the EUI from the instrument to expose the connector baseplate and ferrule.

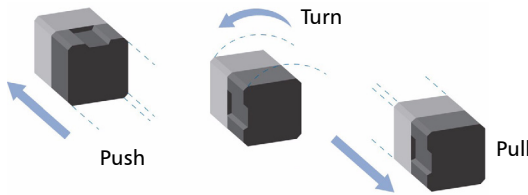

2. Moisten a 2.5 mm cleaning tip with *one drop* of isopropyl alcohol (alcohol may leave traces if used abundantly).
3. Slowly insert the cleaning tip into the EUI adapter until it comes out on the other side (a slow clockwise rotating movement may help).

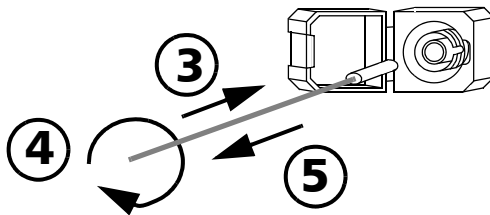

4. Gently turn the cleaning tip one full turn, then continue to turn as you withdraw it.

5. Repeat steps 3 to 4 with a dry cleaning tip.

Note: *Make sure you don't touch the soft end of the cleaning tip.*

6. Clean the ferrule in the connector port as follows:

6a. Deposit *one drop* of isopropyl alcohol on a lint-free wiping cloth.



IMPORTANT

Isopropyl alcohol may leave residues if used abundantly or left to evaporate (about 10 seconds).

Avoid contact between the tip of the bottle and the wiping cloth, and dry the surface quickly.

- 6b.** Gently wipe the connector and ferrule.
- 6c.** With a dry lint-free wiping cloth, gently wipe the same surfaces to ensure that the connector and ferrule are perfectly dry.
- 6d.** Verify connector surface with a portable fiber-optic microscope (e.g., EXFO's FOMS) or fiber inspection probe (e.g., EXFO's FIP).



WARNING

Verifying the surface of the connector WHILE THE UNIT IS ACTIVE WILL result in permanent eye damage.

7. Put the EUI back onto the instrument (push and turn clockwise).
8. Throw out cleaning tips and wiping cloths after one use.

Maintenance


Replacing Fuses

Replacing Fuses

The FLS-5834A CD/PMD Analyzer Source contains two F2.0L250V-type fuses (IEC, 5 mm x 20 mm (0.197 in x 0.787 in), fast-acting, low breaking capacity, 250 V). The fuse holder is located at the back of the CD/PMD Analyzer Source, just beside the power inlet.


To replace a fuse:

1. Turn off the unit and disconnect the power cord.
2. Using a flat-head screwdriver as a lever, pull out the fuse holder.

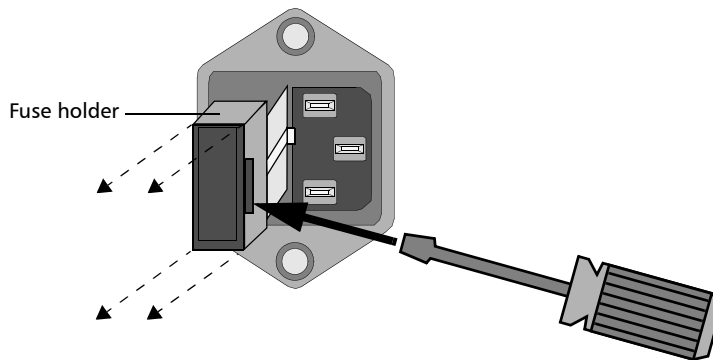

3. Verify and replace the fuses as necessary.

4. Insert the new fuses into the fuse holder.

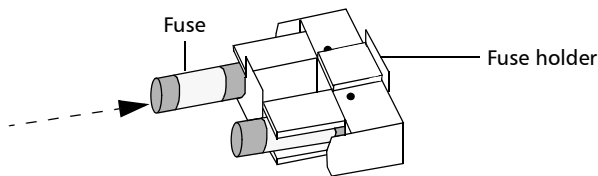

5. Ensure the fuses are placed firmly in the holder before reinstalling it in the unit.
6. Firmly push the fuse holder back into place.

Recalibrating the Unit

Manufacturing and service center calibrations are based on the ISO/IEC 17025 Standard, which states that calibration documents must not contain a recommended calibration interval, unless this has been previously agreed upon with the customer.

Validity of specifications depends on operating conditions. For example, the calibration validity period can be longer or shorter depending on the intensity of use, environmental conditions and unit maintenance. You should determine the adequate calibration interval for your unit according to your accuracy requirements.

Under normal use, EXFO recommends calibrating your unit every year.

Upgrading the Embedded Software

To upgrade the CD/PMD Analyzer Source embedded software, you will need to obtain the upgrade files from EXFO's Technical Support Group. You will also need a null-modem cable.



IMPORTANT

You may upgrade software under DOS, Windows 3.1, Windows 9x, or Windows 2000. With some notebook computers, you may need to be under a DOS environment. If problems occur, contact EXFO.


To upgrade the embedded software:

- 1.** Turn off the CD/PMD Analyzer Source.
- 2.** Connect a null-modem cable to the CD/PMD Analyzer Source RS-232 port and to an unused serial communication port on your computer.
- 3.** On your computer's hard disk, create a folder named "Test" (C:\Test).
- 4.** Unzip or copy the upgrade files into the newly created folder.
- 5.** If the software upgrade is performed under Windows 98, you must restart your computer in DOS mode before starting the upgrade program. In other cases, simply exit to DOS.
- 6.** Go to the "C:\Test" folder and start the upgrade program by typing the following line (spaces are required between parameters):

```
Lo0006.exe /C:2 /F:c:\test\filename.hex /S:19200
```

Parameters can be decoded as follows:

- /C: serial port number (COM2 in the above example)
- /F: file to copy on your unit (replace "filename" with the actual name of the .hex file on your hard disk)
- /S: computer-to-unit transfer speed (if "19200" does not work, try "56700")

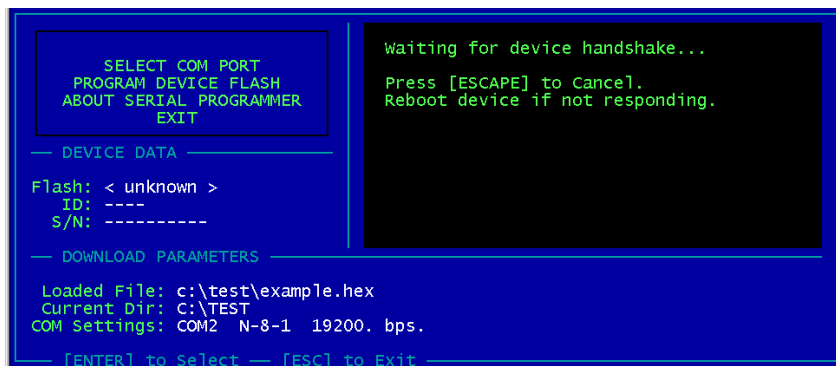

```
SELECT COM PORT
PROGRAM DEVICE FLASH
ABOUT SERIAL PROGRAMMER
EXIT

— DEVICE DATA —
Flash: < unknown >
ID: ----
S/N: -----

— DOWNLOAD PARAMETERS —
Loaded File: c:\test\example.hex
Current Dir: C:\TEST
COM Settings: COM2 N-8-1 19200. bps.

[ENTER] to select — [ESC] to Exit

Waiting for device handshake...
Press [ESCAPE] to Cancel.
Reboot device if not responding.
```

7. When a message about waiting for a device handshake appears, turn on the CD/PMD Analyzer Source.

The unit display remains off, the unit beeps once and the upgrade program starts automatically. A progress bar on the computer screen indicates the upgrade status. Once the software upgrade is complete, the message about restarting the unit appears.

8. If the software upgrade was performed under Windows 2000, an error message to the effect that the *LO0006 NTVDM has encountered a system error and to select close to terminate the application* is displayed. Click **Close** to hide the dialog box.
9. Turn the CD/PMD Analyzer Source off, and then on again.

Some units will display the new version number at startup, otherwise press the up and right arrow keys together while the unit is turned on.

Maintenance

Recycling and Disposal (Applies to European Union Only)

Recycling and Disposal (Applies to European Union Only)



Recycle or dispose of your product (including electric and electronic accessories) properly, in accordance with local regulations. Do not dispose of it in ordinary garbage receptacles.



This equipment was sold after August 13, 2005 (as identified by the black rectangle).

- Unless otherwise noted in a separate agreement between EXFO and a customer, distributor or commercial partner, EXFO will cover costs related to the collection, treatment, recovery and disposal of end-of-lifecycle waste generated by electronic equipment introduced after August 13, 2005 to an European Union member state with legislation regarding Directive 2002/96/EC.
- Except for reasons of safety or environmental benefit, equipment manufactured by EXFO, under its brand name, is generally designed to facilitate dismantling and reclamation.

For complete recycling/disposal procedures and contact information, visit the EXFO Web site at www.exfo.com/recycle.

8 **Troubleshooting**

CD/PMD Analyzer Source Error Messages

Warning/Error Number	Description	Recommended Action
-11	Module reset error: The nulling was not performed correctly.	Restart your unit to solve the problem.
-12	Wrong module ID: The module returns the wrong ID.	Call EXFO for assistance.
-20	Module communication error: Communication error with the module.	Restart your unit to solve the problem.
-25	Checksum error: Checksum error while reading the module's FIFO.	Restart your unit to solve the problem.
-30	Command not accepted: The command that caused the warning will be lost. The unit may continue with the program even if the command was not performed.	If problem persists, call EXFO for assistance.
-31	Module setting error: One of the settings sent to the unit is wrong.	Review your command before sending it again.
-32	Action currently in progress: You cannot send a command while the unit is already active.	Wait until the unit is done before sending the command.
-34	Command overflow: Too many commands were sent to the unit at a time.	Wait until the unit is done before sending more commands.

Troubleshooting

CD/PMD Analyzer Source Error Messages

Warning/Error Number	Description	Recommended Action
-40	FIFO not ready for reading: The unit's FIFO is not ready for reading. Commands sent will be ignored.	If problem persists, call EXFO for assistance.
-60	Laser over-current: A problem occurred with the current going to the laser.	Call EXFO for assistance.
-64	EEPROM error: The EEPROM was not detected.	Call EXFO for assistance.
-65	EEPROM checksum error: A checksum error was detected by the unit.	Call EXFO for assistance.
-68	Temperature error: The operating temperature of the unit is from 10 °C to 40 °C (50 °F to 104 °F).	Make sure the ambient temperature remains within the specified temperature range.
-69	FPGA problem: An FPGA problem was detected.	Call EXFO for assistance.
-73	Supply voltage error: Internal voltage values are out of the operation range.	Call EXFO for assistance.
-74	Laser pump failure: A problem occurred in the output (optical) power of the laser pump.	Call EXFO for assistance.
-75	Laser temperature problem: Laser temperature is out of the operation range.	Make sure the ambient temperature remains within the specified temperature range.

Warning/Error Number	Description	Recommended Action
-76	Thermo-electric cooler over-current: A problem occurred with the current going to the thermo-electric cooler.	Call EXFO for assistance.
-79	EEPROM access error: A problem occurred when accessing the EEPROM memory (read or write).	Call EXFO for assistance.
100	No more room in the command pipe: A command could not be added to the command pipe.	If problem persists, call EXFO for assistance.
101	Timeout error: The command request was not performed in the set time amount.	Call EXFO for assistance.
102	Runtime error: The command was not performed by the unit due to a runtime error.	Call EXFO for assistance.
103	Invalid response: A command has triggered an invalid response from the unit.	Call EXFO for assistance.
200	Decompression error: An error occurred while decompressing the software.	Call EXFO for assistance.
32244	Floating exception: There is an overflow while running a command.	Restart your unit to solve the problem.
32245	Stack overflow: Not enough RAM to run the command.	Restart your unit to solve the problem.

Troubleshooting

CD/PMD Analyzer Source Error Messages

Warning/Error Number	Description	Recommended Action
32246	Abort called in firmware: The unit used a command which it is not intended to.	Restart your unit to solve the problem.
32300	Heap overflow: Not enough space in the heap.	Restart your unit to solve the problem.
32301 32302	Malloc overflow: Not enough RAM to run the command.	Restart your unit to solve the problem.
32303	Divide by zero: The unit attempted to perform a division by zero, which gives an infinite answer.	Restart your unit to solve the problem.
32304	Array boundary error: A table index is outside the boundaries set by the array.	Restart your unit to solve the problem.
32305	Invalid Opcode: The unit did not recognize the binary code.	Restart your unit to solve the problem.

GPIB Troubleshooting

Problem	Probable Cause	Solution
Unable to communicate with CD/PMD Analyzer Source (no response from *IDN? command).	Incorrect communication type selected.	Select the correct communication type: RS-232 or GPIB.
	Incorrect communication parameters.	Check the communication parameters: bus address, baud rate, flow control, etc., as required.
	Incorrect termination characters.	Synchronize termination characters between the GPIB controller and the SCPI manager.
	Poor bus connection.	Ensure the functioning of the controller card and make sure that the bus cable is properly connected.
	Improper configuration.	Verify that the GPIB interface is properly configured.
Receive "Undefined header" error.	Incorrect command syntax.	Verify and correct syntax.
Unstable communication.	Incorrect termination character.	Synchronize termination characters between the GPIB controller and the SCPI manager.

Troubleshooting

Finding Information on the EXFO Web Site

Finding Information on the EXFO Web Site

The EXFO Web site provides answers to frequently asked questions (FAQs) regarding the use of your FLS-5834A CD/PMD Analyzer Source.

To access FAQs:

1. Type <http://www.exfo.com> in your Internet browser.
2. Click the **Support** tab.
3. Click **FAQs** and follow the on-screen instructions. You will be given a list of questions pertaining to your subject.

The EXFO Web site also provides the product's most recent technical specifications.


Contacting the Technical Support Group

To obtain after-sales service or technical support for this product, contact EXFO at one of the following numbers. The Technical Support Group is available to take your calls from Monday to Friday, 7:30 a.m. to 8:00 p.m. (Eastern Time in North America).

Technical Support Group
400 Godin Avenue
Quebec (Quebec) G1M 2K2
CANADA

1 866 683-0155 (USA and Canada)
Tel.: 1 418 683-5498
Fax: 1 418 683-9224
support@exfo.com

To accelerate the process, please have information such as the name and the serial number (see the product identification label—an example is shown below), as well as a description of your problem, close at hand.

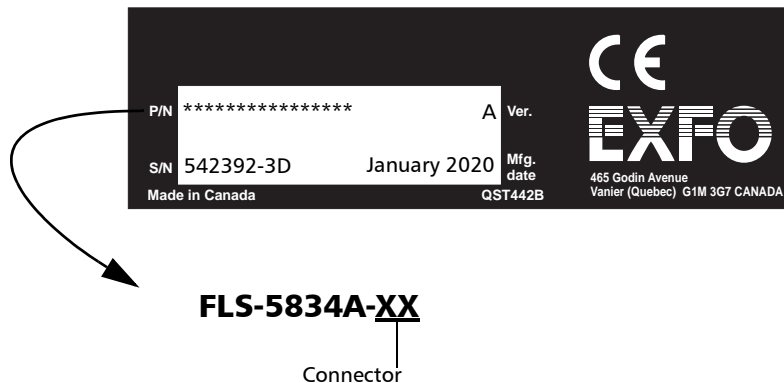

Transportation

Maintain a temperature range within specifications when transporting the unit. Transportation damage can occur from improper handling. The following steps are recommended to minimize the possibility of damage:

- Pack the unit in its original packing material when shipping.
- Avoid high humidity or large temperature fluctuations.
- Keep the unit out of direct sunlight.
- Avoid unnecessary shocks and vibrations.

9 **Warranty**

General Information

EXFO Electro-Optical Engineering Inc. (EXFO) warrants this equipment against defects in material and workmanship for a period of two years from the date of original shipment. EXFO also warrants that this equipment will meet applicable specifications under normal use.

During the warranty period, EXFO will, at its discretion, repair, replace, or issue credit for any defective product, as well as verify and adjust the product free of charge should the equipment need to be repaired or if the original calibration is erroneous. If the equipment is sent back for verification of calibration during the warranty period and found to meet all published specifications, EXFO will charge standard calibration fees.



IMPORTANT

The warranty can become null and void if:

- **unit has been tampered with, repaired, or worked upon by unauthorized individuals or non-EXFO personnel.**
- **warranty sticker has been removed.**
- **case screws, other than those specified in this guide, have been removed.**
- **case has been opened, other than as explained in this guide.**
- **unit serial number has been altered, erased, or removed.**
- **unit has been misused, neglected, or damaged by accident.**

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL EXFO BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Warranty

Liability

Liability

EXFO shall not be liable for damages resulting from the use of the product, nor shall be responsible for any failure in the performance of other items to which the product is connected or the operation of any system of which the product may be a part.

EXFO shall not be liable for damages resulting from improper usage or unauthorized modification of the product, its accompanying accessories and software.

Exclusions

EXFO reserves the right to make changes in the design or construction of any of its products at any time without incurring obligation to make any changes whatsoever on units purchased. Accessories, including but not limited to fuses, pilot lamps, batteries and universal interfaces (EUI) used with EXFO products are not covered by this warranty.

This warranty excludes failure resulting from: improper use or installation, normal wear and tear, accident, abuse, neglect, fire, water, lightning or other acts of nature, causes external to the product or other factors beyond EXFO's control.



IMPORTANT

EXFO will charge a fee for replacing optical connectors that were damaged due to misuse or bad cleaning.

Certification

EXFO certifies that this equipment met its published specifications at the time of shipment from the factory.

Service and Repairs

EXFO commits to providing product service and repair for five years following the date of purchase.

To send any equipment for service or repair:

- 1.** Call one of EXFO's authorized service centers (see *EXFO Service Centers Worldwide* on page 54). Support personnel will determine if the equipment requires service, repair, or calibration.
- 2.** If equipment must be returned to EXFO or an authorized service center, support personnel will issue a Return Merchandise Authorization (RMA) number and provide an address for return.
- 3.** If possible, back up your data before sending the unit for repair.
- 4.** Pack the equipment in its original shipping material. Be sure to include a statement or report fully detailing the defect and the conditions under which it was observed.
- 5.** Return the equipment, prepaid, to the address given to you by support personnel. Be sure to write the RMA number on the shipping slip. *EXFO will refuse and return any package that does not bear an RMA number.*

Note: *A test setup fee will apply to any returned unit that, after test, is found to meet the applicable specifications.*

After repair, the equipment will be returned with a repair report. If the equipment is not under warranty, you will be invoiced for the cost appearing on this report. EXFO will pay return-to-customer shipping costs for equipment under warranty. Shipping insurance is at your expense.

Routine recalibration is not included in any of the warranty plans. Since calibrations/verifications are not covered by the basic or extended warranties, you may elect to purchase FlexCare Calibration/Verification Packages for a definite period of time. Contact an authorized service center (see *EXFO Service Centers Worldwide* on page 54).

Warranty

EXFO Service Centers Worldwide

EXFO Service Centers Worldwide

If your product requires servicing, contact your nearest authorized service center.

EXFO Headquarters Service Center

400 Godin Avenue
Quebec (Quebec) G1M 2K2
CANADA

1 866 683-0155 (USA and Canada)
Tel.: 1 418 683-5498
Fax: 1 418 683-9224
quebec.service@exfo.com

EXFO Europe Service Center

Omega Enterprise Park, Electron Way
Chandlers Ford, Hampshire S053 4SE
ENGLAND

Tel.: +44 2380 246810
Fax: +44 2380 246801
europe.service@exfo.com

EXFO China Service Center/ Beijing OSIC

Beijing New Century Hotel
Office Tower, Room 1754-1755
No. 6 Southern Capital Gym Road
Beijing 100044
P. R. CHINA

Tel.: +86 (10) 6849 2738
Fax: +86 (10) 6849 2662
beijing.service@exfo.com

A *Technical Specifications*



IMPORTANT

The following technical specifications can change without notice. The information presented in this section is provided as a reference only. To obtain this product's most recent technical specifications, visit the EXFO Web site at www.exfo.com.

SPECIFICATIONS^a

Center wavelength (nm)	1580 ±20
Output power (dBm)	4
Peak spectral density (dBm/nm)	> -12.5
Power stability (15 minutes) (dB)	< 0.075
Modulation frequency (MHz)	100

GENERAL SPECIFICATIONS

Temperature		
operating	0 °C to 40 °C	(32 °F to 104 °F)
storing	-20 °C to 50 °C	(-4 °F to 122 °F)
Relative humidity (non-condensing)	0 % to 90 %	
Size (H x W x D)	116 mm x 218 mm x 340 mm	(4 1/4 in x 8 1/2 in x 13 1/4 in)
Weight (without transceivers)	3.2 kg	(7.1 lb)

NOTES


a. Typical

B *Rackmount Installation*

You can place your FLS-5834A CD/PMD Analyzer Source in a rackmount to facilitate its usage.

To install the rackmount:

1. Fix the angle iron using four flat Phillips screws.

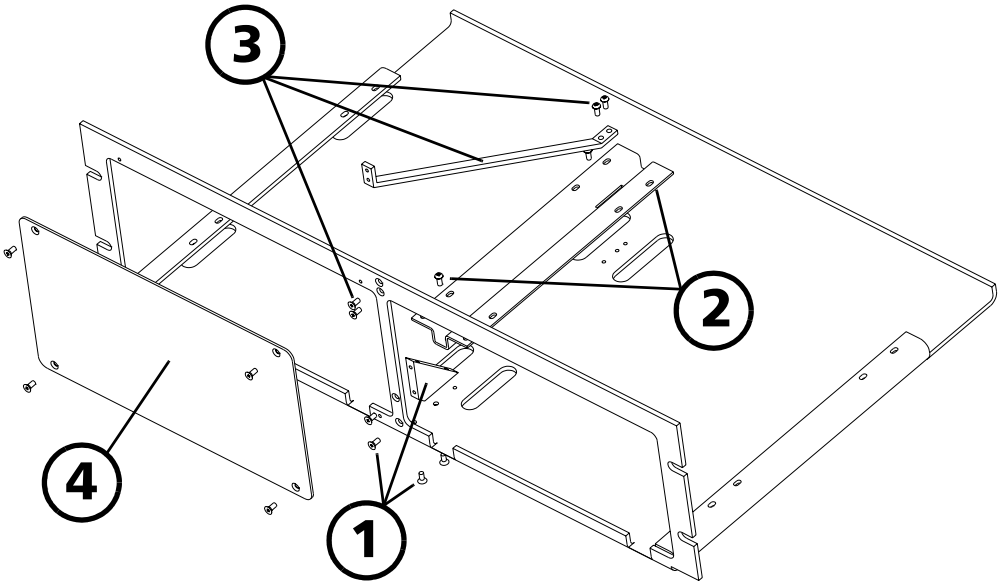


2. Fix the rackmount bracket to the frame using two round Phillips screws.
3. Fix the rackmount stiffener using two flat Phillips screws (for the front panel) and two round Phillips screws.
4. If your rackmount will contain only one unit, fix the rackmount cover plate to the empty part of the frame using four flat Phillips screws.

Rackmount Installation

To install your FLS-5834A CD/PMD Analyzer Source in a rackmount:

1. Slide the benchtop unit into the rackmount and tighten it from underneath using the four cover fixing screws.

If measurement X on the illustration exceeds 11.125 in., fix the unit into the four holes identified as A. Otherwise, use the other four holes.

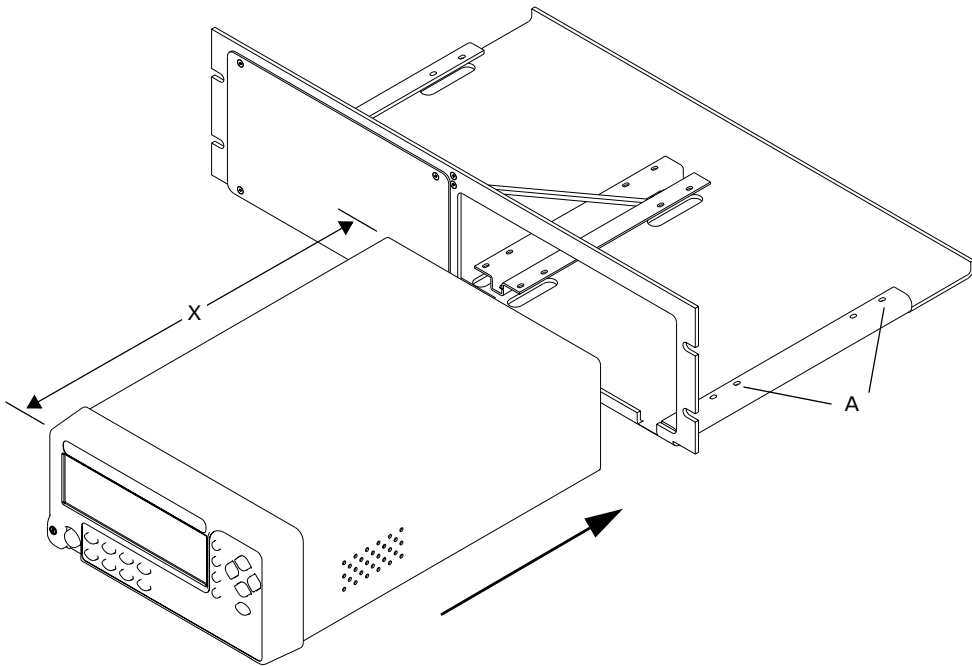

2. If a second benchtop is to be installed, remove the cover plate and repeat step 1.

C Remote Control Commands

IEEE 488.2 Commands—Quick Reference

The CD/PMD Analyzer Source recognizes the required commands identified in IEEE 488.2. The table below summarizes these commands.

Command	Function
*CLS	Clear status command
*ESE	Standard event status enable command
*ESE?	Standard event status enable query
*ESR?	Standard event status register query
*IDN?	Identification query
*LOK ^a	Set Remote Lockout programming state
*LOK? ^a	Remote Lockout programming state query
*OPC	Operation complete command
*OPC?	Operation complete query
*REM ^a	Set Remote programming state
*RST	Reset command
*SRE	Service request enable command
*SRE?	Service request enable query
*STB?	Read status byte query
*TST?	Self-test query
*WAI	Wait for pending operations to be completed

a. This command can only be used with RS-232 communication.

IEEE 488.2 Commands—Description

*CLS	
Description	The *CLS command clears the Standard Event Status Register and the Error/Event Queue.
Syntax	*CLS
Parameter(s)	None

*ESE									
Description	<p>The *ESE command sets the Standard Event Status Enable Register bits, as defined in the table below. This register contains a mask value for the bits to be enabled in the Standard Event Status Register.</p> <p style="text-align: center;">MSB Standard Event Status Enable Register LSB</p> <table border="1" style="margin-left: auto; margin-right: auto;"><tr><td>PON</td><td>N.U.</td><td>CME</td><td>EXE</td><td>DDE</td><td>QYE</td><td>N.U.</td><td>OPC</td></tr></table>	PON	N.U.	CME	EXE	DDE	QYE	N.U.	OPC
PON	N.U.	CME	EXE	DDE	QYE	N.U.	OPC		
Syntax	*ESE<wsp> <RegisterValue>								
Parameter(s)	<p><i>RegisterValue:</i></p> <p>The program data syntax for <RegisterValue> is defined as a <DECIMAL NUMERIC PROGRAM DATA> element.</p> <p>The <RegisterValue>, expressed in base 2, represents the bit values of the Standard Event Status Enable Register.</p>								

***ESE**

The table below shows the contents of this register.

Bit	Weight	Meaning
PON	128	Power ON Enable
N.U.	64	Not used
CMD	32	CoMmanD Error Enable
EXE	16	Execution Error Enable
DDE	8	Device Dependent Error Enable
QRY	4	QueRry Error Enable
N.U.	2	Not used
OPC	1	Operation Complete Enable

A value of 1 in the Enable Register enables the corresponding bit in the Status Register, a value of 0 disables the bit. The value of the <RegisterValue> shall be in the range of 0 through 255.

Example(s)

*ESE 25

where 25 = (bit EXE, bit DDE and bit OPC)

*ESE 0

clears the content of the Standard Event Status Enable register

See Also

*ESE?


*ESR?

Remote Control Commands

IEEE 488.2 Commands—Description

*ESE?

Description The *ESE? query allows the programmer to determine the current contents of the Standard Event Status Enable Register. See the contents of this register below.



Syntax *ESE?

Parameter(s) None

Response Syntax <RegisterValue>

ESE?*Response(s)***RegisterValue:*

The response data syntax for <RegisterValue> is defined as a <NR1 NUMERIC RESPONSE DATA> element.

The <RegisterValue> ranges from 0 through 255.

The <RegisterValue> value expressed in base 2 (binary) represents the bit values of the Standard Event Status Enable register. See below.

Bit	Weight	Meaning
PON	128	Power ON Enable
N.U.	64	Not used
CMD	32	CoMmanD Error Enable
EXE	16	Execution Error Enable
DDE	8	Device Dependent Error Enable
QRY	4	QueRry Error Enable
N.U.	2	Not used
OPC	1	Operation Complete Enable

Example(s)

*ESE? returns 133

where 133 = (bit PON, bit QYE and bit OPC)

See Also

*ESE


*ESR?

Remote Control Commands

IEEE 488.2 Commands—Description

*ESR?

Description The *ESR? query allows the programmer to determine the current contents of the Standard Event Status Register. Reading the Standard Event Status Register clears it. See the contents of this register below.



Syntax *ESR?

Parameter(s) None

Response Syntax <RegisterValue>

***ESR?**

Response(s)

RegisterValue:

The response data syntax for <RegisterValue> is defined as a <NR1 NUMERIC RESPONSE DATA> element.

The <RegisterValue> ranges from 0 through 255.

The <RegisterValue> value expressed in base 2 (binary) represents the bit values of the Standard Event Status register. See below.

Bit	Weight	Meaning
PON	128	Power ON Enable
N.U.	64	Not used
CMD	32	CoMmanD Error Enable
EXE	16	Execution Error Enable
DDE	8	Device Dependent Error Enable
QRY	4	QueRry Error Enable
N.U.	2	Not used
OPC	1	Operation Complete Enable

Example(s)

*ESR? returns 33
where 33 = (bit CME and bit OPC)

See Also

*ESE
*ESE?

Remote Control Commands

IEEE 488.2 Commands—Description

*IDN?	
Description	The intent of the *IDN? query is for the unique identification of devices over the system interface.
Syntax	*IDN?
Response(s)	“EXFO E.-O. Engineering,FLS-5834A,xxxxxxxxxx,2.0r0”, where – xxxxxxxx is the serial number – 2.0r0 is the Firmware level.

*LOK	
Description	This command is used to set the Remote Lockout programming state.
Syntax	*LOK<wsp><LockoutState>
Parameter(s)	<i>LockoutState:</i> The program data syntax for <LockoutState> is defined as a <Boolean Program Data> element. The <LockoutState>special forms ON and OFF are accepted on input for increased readability. ON corresponds to 1 and OFF to 0. The <LockoutState> parameter is the new lockout state of the CD/PMD Analyzer Source: “0”- Removing the Lockout state of the source. “1”- Enabling the Lockout state of the source.

***LOK**

Example(s)	*LOK 1
Notes	This command can only be used when working with RS-232 communication.
See Also	*LOK?

Remote Control Commands

IEEE 488.2 Commands—Description

*LOK?	
Description	This query returns the Remote Lockout programming state indicating if the CD/PMD Analyzer Source has been locked out by a remote application.
Syntax	*LOK?
Parameter(s)	None
Response Syntax	<LockoutState>
Response	<i>LockoutState:</i> The response data syntax for <LockoutState> is defined as an <NR1 NUMERIC RESPONSE DATA> element. The <LockoutState> response corresponds to the remote lockout state of the CD/PMD Analyzer Source: “0”- The source is unlocked. “1”- The source is locked.
Example(s)	*LOK? returns 1
Notes	This command can only be used when working with RS-232 communication.
See Also	*LOK

OPC*Description**

The *OPC command allows synchronization between the instrument and an external controller.

The *OPC command causes the instrument to set bit 0 (Operation Complete) in the Standard Event Status Register to the TRUE (logic 1) state when the instrument completes all pending operations.

Detection of the Operation Complete message can be accomplished by continuous polling of the Standard Event Status Register using the *ESR? common query command. However, using a service request eliminates the need to poll the Standard Event Status Register thereby freeing the controller to do other useful work.

Syntax

*OPC

Parameter(s)

None

See Also

*OPC?
*WAI

Remote Control Commands

IEEE 488.2 Commands—Description

*OPC?

Description	<p>The *OPC? query allows synchronization between the instrument and an external controller by reading the Output Queue or by waiting for a service request on the Message Available (MAV) bit in the Status Byte Register.</p> <p>The *OPC? query causes the instrument to place an ASCII character, 1, into its Output Queue when the device completes all pending operations. A consequence of this action is that the MAV bit in the Status Byte Register is set to state 1.</p>
Syntax	*OPC?
Parameter(s)	None
Response Syntax	<Acknowledge>
Response(s)	<p><i>Acknowledge:</i></p> <p>The response data syntax for <Acknowledge> is defined as a <NR1 NUMERIC RESPONSE DATA> element.</p> <p>The <Acknowledge> response is a single ASCII-encoded byte corresponding to 1.</p> <p>The receipt of an <Acknowledge> response indicates that all pending selected device operations have been completed.</p>
Example(s)	*OPC? Return 1
See Also	*OPC *WAI

***REM**

Description	This command is used to set the Remote programming state that determines if the source will be controlled locally or remotely.
Syntax	*REM<wsp><RemoteState>
Parameter(s)	<i>RemoteState:</i> The program syntax data for <RemoteState> is defined as a <Boolean Program Data> element. The <RemoteState> special forms ON and OFF are accepted on input for increased readability. ON corresponds to 1 and OFF to 0. The <RemoteState> parameter is the new remote state of the CD/PMD Analyzer Source: “0”- to set Local state. “1”- to set Remote state.
Example(s)	*REM 1
Notes	This command can only be used with RS-232 communication.

Remote Control Commands


IEEE 488.2 Commands—Description

*RST	
Description	<p>The *RST command performs a device reset. This command is the third reset level in a three-level reset strategy. The Reset command shall do the following:</p> <ul style="list-style-type: none">a) Sets the device-specific functions to a known state that is independent of the past-use history of the device.b) Forces the device into OCIS state (Operation complete Command Idle State).c) Forces the device into OQIS state (Operation complete Query Idle State). <p>The Reset command explicitly DOES NOT affect the following:</p> <ul style="list-style-type: none">a) The state of the Communication interface.b) The Output Queue.c) Any Event Enable Register setting, including the Standard Event Status Enable Register setting.d) Any Event Register setting, including the Standard Event Status Register settings.e) Calibration data that affects device specifications.f) The Service Request Enable Register setting.
Syntax	*RST
Parameter(s)	None

*SRE

Description

The *SRE command sets the Service Request Enable Register bits. See the contents of this register below. This register contains a mask value to enable the bits in the Status Byte Register.



Syntax

*SRE<wsp> <RegisterValue>

Parameter(s)

RegisterValue:

The program data syntax for <RegisterValue> is defined as a <DECIMAL NUMERIC PROGRAM DATA> element.

The <RegisterValue> value ranges from 0 through 255.

The <RegisterValue>, expressed in base 2 (binary), represents the bit values of the Service Request Enable Register.

Remote Control Commands

IEEE 488.2 Commands—Description

***SRE**

See the contents of this register below.

Bit	Weight	Meaning
N.U.	128	Not used
N.U.	64	Not used
ESB	32	Event Summary Bit Enable
MAV	16	Message AVailable Enable
N.U.	8	Not used
EAV	4	Error / Event AVailable Enable
N.U.	2	Not used
N.U.	1	Not used

A bit value of zero shall indicate a disabled condition.

Example(s)

*SRE 52
where 52 = (bit ESB, bit MAV and bit EAV)


See Also

*SRE?
*STB?

*SRE?

Description

The *SRE? query allows the programmer to determine the current contents of the Service Request Enable Register. See the contents of this register below.



Bit	Weight	Meaning
N.U.	128	Not used
N.U.	64	Not used
ESB	32	Event Summary Bit Enable
MAV	16	Message Available Enable
N.U.	8	Not used
EAV	4	Error / Event Available Enable
N.U.	2	Not used
N.U.	1	Not used

Syntax

*SRE?

Parameter(s)

None

Response Syntax

<RegisterValue>

Remote Control Commands

IEEE 488.2 Commands—Description

***SRE?**

Response(s)

RegisterValue:

The response data syntax for <RegisterValue> is defined as a <NR1 NUMERIC RESPONSE DATA> element.

The <RegisterValue> ranges from 0 through 255.

When converted to binary (base 2), the <RegisterValue> represents the current bit values of the Service Request Enable Register.

Example(s)


*SRE Return 32 (bit ESB)

See Also

*SRE
*STB?

***STB?**

Description The *STB? query allows the programmer to read the status byte and Master Summary Status bit. See the content of this register below.



Syntax *STB?

Parameter(s) None

Response Syntax <RegisterValue>

Remote Control Commands

IEEE 488.2 Commands—Description

***STB?**

Response(s)

RegisterValue:

The response data syntax for <RegisterValue> is defined as a <NR1 NUMERIC RESPONSE DATA> element.

The <RegisterValue> ranges from 0 through 255.

The <RegisterValue> value, expressed in base 2 (binary) represents the bit values of the Status Byte Register. See the contents of this register below.

Bit	Weight	Meaning
N.U.	128	Not used
RQS/ MSS	64	ReQuest Service (read by serial polling)/MaSter Summary bit (read by *STB?)
ESB	32	Event Summary Bit Enable
MAV	16	Message AVailable Enable
N.U.	8	Not used
EAV	4	Error / Event AVailable Enable
N.U.	2	Not used
N.U.	1	Not used

Example(s)

*STB? Return 68
where 68 = (bit MSS and bit EAV)

See Also

*SRE
*SRE?

***TST?**

Description	This query returns a binary value indicating the test results.
Syntax	*TST?
Response	<p><i>Result:</i></p> <p>The response data syntax for <Result> is defined as a <NR1 NUMERIC RESPONSE DATA> element.</p> <p>A decimal value indicating the sum of all corresponding errors:</p> <p>“0”–No errors</p> <p>“1”–N/A</p> <p>“2”–Supply voltage error:</p> <p>“4”–N/A</p> <p>“8”–N/A</p> <p>“16”–Laser temperature problem:</p> <p>“32”–Thermo-electric cooler over-current:</p> <p>“64”–N/A</p> <p>“128”–EEPROM access error:</p> <p>“256”–EEPROM checksum error:</p> <p>“512”–EEPROM error:</p> <p>“1024”–FPGA problem:</p> <p>“2048”–Temperature error:</p> <p>“4096”–SPI communication problem</p> <p>“8192”–PLL unlock</p>

Remote Control Commands

IEEE 488.2 Commands—Description

*WAI	
Description	The *WAI command shall prevent the device from executing any further commands or queries until the no-operation-pending flag becomes TRUE.
Syntax	*WAI
Parameter(s)	None
Example(s)	*WAI
See Also	*OPC *OPC?

Product-Specific Commands—Quick Reference

The table below summarizes commands specific to the CD/PMD Analyzer Source.

Command		Parameter/ Response	Description
DISP	BRIG	<numeric_value> MINimum MAXimum	Turn backlight on or off
	BRIG?	(0 1)	Backlight on or off?
SOUR	POW	STAT	0 1 ON OFF
		STAT?	(0 1)
SYST	ERR?	Error code	Next error from error queue?
	VERS?	Current version	Identification string?

Remote Control Commands

Product-Specific Commands-Description

Product-Specific Commands-Description

DISPlay:BRIGhtness

Description	This command turns the backlight of the unit on or off.
Syntax	DISP:BRIG<wsp><numeric_value> MINimum MAXimum
Parameters	A numeric parameter: “1”–turns the backlight on “0”–turns the backlight off
Example	DISP:BRIG 1 DISPLAY:BRIGHTNESS 0

DISPlay:BRIGhtness?

Description	This command returns the state of the backlight.
Syntax	DISP:BRIG?
Response	A numeric value: “1”-the backlight is on “0”-the backlight is off
Example	DISP:BRIG? 1

SOURce:POWer[:STATe]

Description	This command turns on or off the source. When the source is on, the red LED on the front of the module illuminates.
Syntax	SOUR:POW[:STAT] <wsp> <boolean> ON OFF
Parameters	A boolean parameter: “1”–turns the source on “0”–turns the source off
Example	SOUR:POW:STAT 1 (turns the source on.) SOURCE:POWER 0 (turns the source off.)

SOURce:POWer:STATe?

Description	This query returns a value indicating the state of the optical source (on or off).
Syntax	SOUR:POW:STAT?
Response	A boolean value: “1”–the source is on “0”–the source is off
Example	SOUR:POW:STAT? 1

Remote Control Commands

Product-Specific Commands-Description

SYSTem:ERRor?

Description This command returns the next error in the error queue. When an error is generated, an error number is sent to the error queue. The error queue is accessed with the SYST:ERR? query.

Syntax SYST:ERR?

Response See *SCPI-Based Errors* on page 85.

SYSTem:VERSion?

Description This query reads the CD/PMD Analyzer Source identification string.

Syntax SYST:VERS?

Response “EXFO E.-O. Eng. FLS-5834A vx.xx”xxxxxxxx xxxxxxxx, where xxxxxxxx xxxxxxxx is the serial number and vx.xx is the current product version.

Note This query returns the same response as the *IDN? query.

D *SCPI-Based Errors*

Error Number	Description	Probable Cause
-100	“Command error”	A command error has occurred. This is the generic syntax error for devices that cannot detect more specific errors.
-104	“Data type error”	The parser recognized a data element different than the one allowed.
-108	“Parameter not allowed”	More parameters were received than expected for the header.
-109	“Missing parameter”	Fewer parameters were received than expected for the header.
-113	“Undefined header”	The header is syntactically correct, but it is undefined for this specific device.
-130	“Suffix error”	An error occurred while parsing a suffix.
-131	“Invalid suffix”	The suffix does not follow the appropriate syntax or it is inappropriate for this device.
-138	“Suffix not allowed”	A suffix was encountered after a numeric element which does not allow suffixes.
-200	“Execution error”	An execution error occurred. This is the generic syntax error for devices that cannot detect more specific errors.
-222	“Data out of range”	A legal program data element was parsed but could not be executed because the interpreted value was outside the legal range as defined by the device.

SCPI-Based Errors

Error Number	Description	Probable Cause
-224	“Illegal parameter value”	An exact value from a list of possibilities was expected.
-300	“Device-specific error”	A device-dependent error occurred. This is the generic syntax error for devices that cannot detect more specific errors.
-321	“Out of memory”	An internal operation needed more memory than was available.
-350	“Queue overflow”	A specific code entered into the queue in lieu of the code that caused the error. This code indicates that there is no room in the queue and an error occurred but was not recorded.
-365	“Time out error”	This is a generic device-dependent error.
-400	“Query error”	A query error occurred. This is the generic syntax error for devices that cannot detect more specific errors.

Index

	A	
AC requirements		8
address, GPIB		24
adjusting contrast		13
after-sales service		49
	B	
backlight		
default		15
setting		13
baud rate, setting		25
benchtop, installing in a rackmount		58
buffer, errors		34
	C	
calibration		
certificate		39
interval		39
Canadian Standards Association (CSA)		v
capacitors		7
caution		
of personal hazard		3
of product hazard		3
certification information		v
changing parameters		11
Chromatic Dispersion Analyzer		1
cleaning		
EUI connectors		36
fiber ends		17
front panel		35
clearing error queue		34
code writing		33
command structure		33
commands		
GPIB		33
IEEE 488.2		60
IEEE 488.2, quick reference		59
RS-232		33
commands, specific		81
common commands		59
communication		
parameters		27
speed		25
configuring display		13, 14
connector pinout configuration		22
connectors, cleaning		36
contrast, setting		13
control character		26
controlling, remotely		21
conventions, safety		3
covers, unit		7
CSA		v
current software version		41
current, electrical		8
customer service		53
	D	
data display		10
data transmission		26
deactivating backlight		13
default values		15
defining values		11
diagram of the menus		11
disconnecting unit		6
display		
configuring		13, 14
overview		10
DTE pinout configuration		22
	E	
EOI (End or Identify)		27
EOS (End of String)		27
equipment returns		53

Index

error	
messages, format	34
numbers	34
queue	34
errors	
related to unit.....	43
SCPI	34
EUI	
baseplate	18
connector adapter	18
dust cap.....	18
EUI connectors, cleaning	36
EXFO service centers.....	54
EXFO universal interface. <i>see</i> EUI	
EXFO Web site.....	48

F

FAQs.....	48
fiber ends, cleaning	17
FIFO buffer	34
flow control	
default	15
setting	26
format, error messages	34
front panel, cleaning	35
FTB-5800	1
fuse	
holder	2, 21
replacement.....	7, 38
type	38

G

GPIB	
address.....	23
commands	59
communication parameters.....	27
default address.....	15
mode.....	23
port.....	2, 21
troubleshooting	47
GPIB commands.....	81
ground.....	2, 21

H

handshake, software.....	26
--------------------------	----

I

identification label	49
IEEE 488.2 commands.....	59, 60
indicator	
locked keyboard	10
remote control	10, 22
source status	10
indoor use.....	7
initializing error buffer	34
inlets	6
input current.....	8
installing	
rackmount.....	57
unit	7
inverted video mode	14

K

keyboard	
definition.....	10
locked indicator.....	10
keywords	33

L	
label, identification	49
label, safety	5
locked keyboard	10
M	
main window	10
maintenance	
EUI connectors	36
front panel	35
general information	35
mandatory commands	59, 60
marker, remote programming state (RM)....	71
maximum input current	8
menu	
diagram	11
Setup	11
mounting EUI connector adapter	18
N	
non-volatile memory	9
O	
on/off unit	9
operating source	17
original parameters	15
P	
parameters	
backlight	13
contrast	13
GPIB	27
refresh rate	12
resetting	15
RS-232	27
setting	11
video mode	14
pinout configuration	22
port	
GPIB	2, 21
serial	2, 21, 22
power	
cable	6
inlet	2, 21
on/off	9
plug	6
power source, AC	8
problems with GPIB	47
product	
identification label	49
specifications	48, 55
programmable instruments, standards	33
programming, commands and queries	59
Q	
queries, IEEE 488.2	59
queries, specific	81
R	
rackmount, installing	57
recalibration	39
refresh rate	
default	15
setting	12
register	
ESE	29
ESR	28
SRE	30
STB	30
remote control	21
default	15
description of commands	33
error messages	34
indicator	10, 22
mode	23
repairing unit	7
replacing fuses	38
required commands	59
resetting the unit	15

Index

- return merchandise authorization (RMA) 53
- RM marker 71
- RS-232
 - commands..... 59
 - connector pinout configuration..... 22
 - for software upgrade..... 40
 - mode 23
 - port 23
 - speed..... 25
- RS-232 commands 81
- rules, SCPI 33

S

- safety
 - caution 3
 - conventions 3
 - power cable..... 6
 - warning 3
- SCPI
 - guidelines 33
 - syntax 33
- SCPI commands..... 81
- SCPI-based errors 34
- screen
 - adjusting 13, 14
 - overview 10
- selecting remote mode..... 23
- self-test 9
- sending control character 26
- serial
 - poll 32
 - port 2, 21, 22
- serial communication 26
- service and repairs..... 53
- service centers 54
- service request 32
- service request enable register (SRE) 30
- setting
 - backlight..... 13
 - baud rate..... 25
 - contrast 13

- flow control.....26
- parameters 11
- refresh rate.....12
- video mode 14
- setup button 11
- shipping to EXFO 53
- software
 - handshake.....26
 - upgrade.....40
- source
 - default status 15
 - error messages 43
 - operating 17
 - status indicator 10
- specific commands and queries 81
- specifications, product 48, 55
- SRQ. see service request..... 32
- standard event status
 - enable register (ESE)..... 29
 - register (ESR) 28
- status byte register (STB)..... 30
- status, source 10
- storage requirements 35
- symbols, safety 3
- syntax, command..... 33

T

- technical specifications 48, 55
- technical support 49
- temperature for storage..... 35
- transportation requirements 35, 50
- troubleshooting, GPIB 47
- turning on/off unit 9
- type of fuses 7
- type, serial communication 26

U

unit
 covers 7
 disconnecting 6
 installing 7
 powering 9
 repairing 7
 ventilation 7
unit recalibration 39
upgrading the software 40
using source 17

V

value, defining 11
ventilation 7
video mode
 default 15
 setting 14

W

warranty
 certification 52
 exclusions 52
 general 51
 liability 52
 null and void 51
window, display 10
writing code 33

X

Xoff/Xon characters 26



P/N: 1051288

www.exfo.com · info@exfo.com

CORPORATE HEADQUARTERS	400 Godin Avenue	Quebec (Quebec) G1M 2K2 CANADA Tel.: 1 418 683-0211 · Fax: 1 418 683-2170
EXFO AMERICA	3701 Plano Parkway, Suite 160	Plano TX, 75075 USA Tel.: 1 972 907-1505 · Fax: 1 972 836-0164
EXFO EUROPE	Omega Enterprise Park, Electron Way	Chandlers Ford, Hampshire S053 4SE ENGLAND Tel.: +44 2380 246810 · Fax: +44 2380 246801
EXFO ASIA-PACIFIC	151 Chin Swee Road #03-29, Manhattan House	SINGAPORE 169876 Tel.: +65 6333 8241 · Fax: +65 6333 8242
TOLL-FREE	(USA and Canada)	1 800 663-3936